



KARL'S

EVENT RENTAL

7000 South 10th Street
Oak Creek, WI 53154
(414) 831-7000
www.karls.com

Tips on operation

1. Start by plugging in the floss machine, and turn main power and motor switches to "ON."
2. Always add sugar before turning the machine on.
3. When you add sugar, fill the machine 90 percent full.
4. Reduce "heat control fine tuning" setting to eliminate smoking of the machine.
5. Determine optimum setting for "heat range" and "heat control fine tuning."
6. Never place hands or cones near the moving center ring.



Operating Instructions

1. Use a clean, damp cloth to moisten the inside of the floss pan so the floss will adhere to the pan
2. Notice the direction of the floss as it is spun off the floss head.
3. Adjust the floaters, move them up for more lift, or down for less lift.
4. Hold the cone at the pointed end, with the wide part facing out.
5. Break into the web of floss with the cone.
6. Lift up the cone with a ring of floss attached and wind the floss onto the cone
7. Do not use the inside of the pan to help you roll the floss, use only the outside.
8. To make a larger web, wrap the ring of floss around the cone another time.

Sugar, Flossine, and Flavorings

- Sugar for cotton candy can be any 100 percent pure-cane or beet sugar
- Regular granulated sugar is recommended as well.
- Avoid extra fine granulated, bottler's fine or "free-flowing" sugar, which may contain cornstarch that can burn or clog the ribbons
- Coarse sugars will require more voltage to the head, and are not recommended.
- Pre-mixed sugar, coloring and flavorings are available from Karl's Event Rental.
- Make sure to follow instructions when mixing the sugar.
- Avoid flavors with gum or starch base, which will burn the ribbons.

Cleaning tips

1. Run all the sugar out of the floss head, so the pan is empty.
2. To remove the carbon from ribbons, empty machine and turn heat to the highest setting for one minute.
3. Next, unplug main electrical supply cord.
4. Wipe the floss head with a damp cloth. Never allow water to enter the floss head of the machine.
5. Be sure all parts are dry before resuming operation or returning the machine to Karl's Event Rental.

