



KARL'S

EVENT RENTAL

7000 South 10th Street
Oak Creek, WI 53154
(414) 831-7000
www.karls.com

Operating Instructions

1. Turn on the "Kettle Heat" switch, and the "Kettle Motor and Exhaust" switch.
2. It is best to let the kettle heat up for 10 to 15 minutes before beginning to pop the corn.
3. Cut open only the portion of the packet containing the oil, and empty it into the kettle.
4. After all the oil has melted, empty the kernels into the kettle as well.
5. Shut the lid of the kettle, as well as the doors on the popcorn machine.
6. It will take several minutes for the corn to begin popping, but there is no need to open the top of the kettle, or the main doors.
7. When popping has stopped, turn off the "Kettle Motor and Exhaust" switch, and rotate the handle to empty the remainder of the popcorn.
8. You may now turn on the "Light" switch, and the "Warmer" switch to keep the popcorn warm and fresh.
9. Be very careful not to touch any part of the machine while it is hot, especially the kettle. Serious burns may result!
10. Karl's Event Rental can provide you with the popcorn and oil packets, as well as serving bags for the popcorn.



Cleaning Tips

1. Allow the kettle to cool entirely before beginning to clean it.
2. Unplug the kettle, and remove it from the rest of the machine.
3. Wipe the entire kettle, but never immerse it in water.
4. Remove the bottom pan and empty it out, and wipe the inside of the machine clean.
5. To avoid cleaning charges, return the machine to Karl's Event Rental in the condition it was received.